


Live for freedom

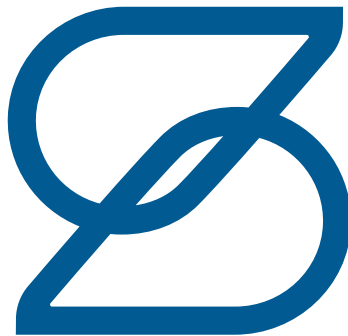

SEEWIN



User Manual
Spirit Series

Thank you for your trust

Sincerely thanks for buying our product, please understand important matters regarding the instructions for use from this manual before you use the product.

Please follow the instructions of the manual.

Please safekeep the manual after reading for review later.

Our products will be improved continually, we will not notice if there's some change.

The pictures in the manual are schematic diagram only, please refer to the actual product for details.

We hope that you can master the instructions for use through this manual.


To make sure the best function provided by the product and personal safety, please:

Read the manual carefully before the first time using.


Some function will be different according to the model, the specific kind prevail

Live for freedom

Liberty

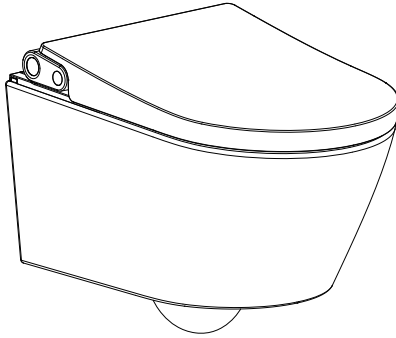

Freedom

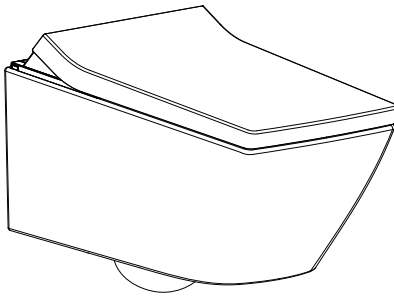


Catalog



1. Overview	1
1.1 Liberty Toilet	1
1.2 Freedom Toilet	2
1.3 Remote	3
2. Packing list	4
3. Explanation of symbols	5
4. Safety instructions.....	5
4.1 Normal use	5
4.2 Safety instructions	5
4.3 The use of battery	7
5. Side button.....	8
5.1 Liberty model side button	8
5.2 Freedom model side button	9
5.3 Flush panel	10
6. Introduction to the remote control and its functions	11
7. Automatic flush	13
8. Automatic cover flip & foot sensor seat flip & function introduction.....	13
9. More humanized design	14
10. Acceptance instructions after installing	15
11. Product specification	15
12. Cleaning and maintenance	16
13. Troubleshooting guide	17
14. Correct Disposal of this product	19




1. Overview

  1.1 Liberty Toilet

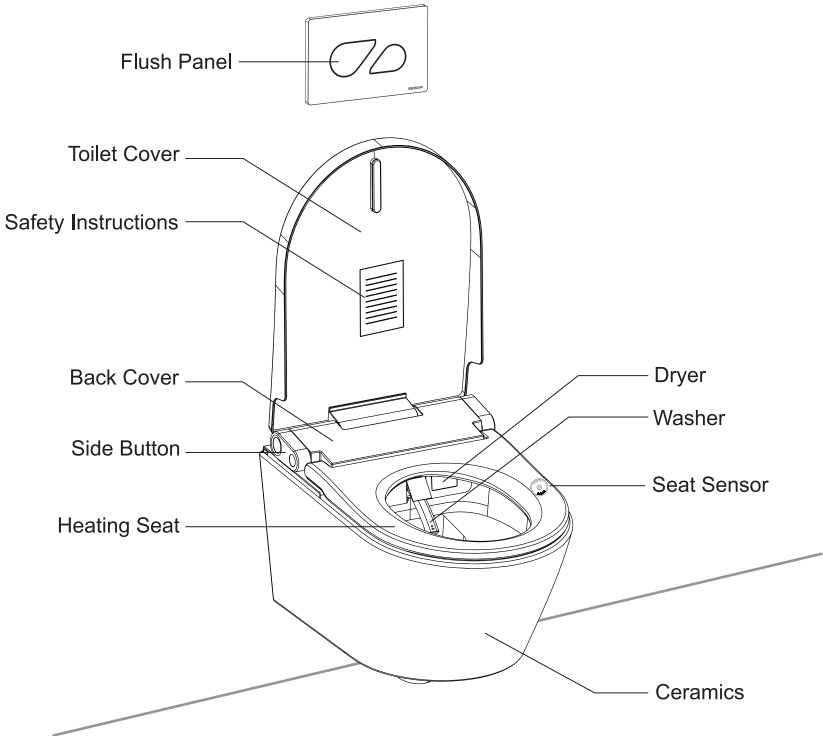




Side button	
<p>Left Button</p>  <p>Stop/Power Lady wash Cool&warm massage</p>	<p>Right Button</p>  <p>Bluetooth connection Butt wash Strong&weak massage</p>

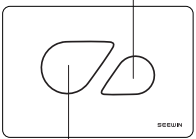Flush button
 <p>Half Flush Full Flush</p>

Note: Regarding the appearance & function, please refer to the physical goods.




1.2 Freedom Toilet

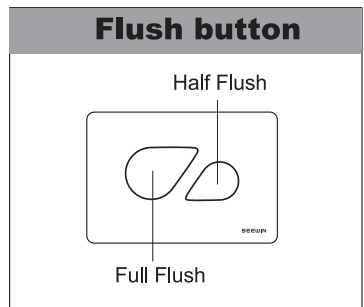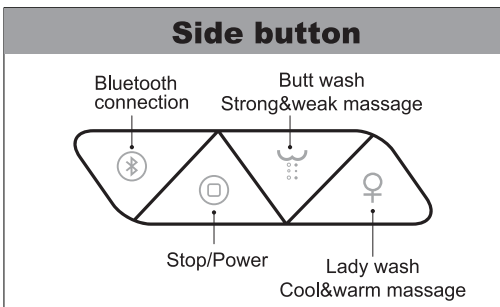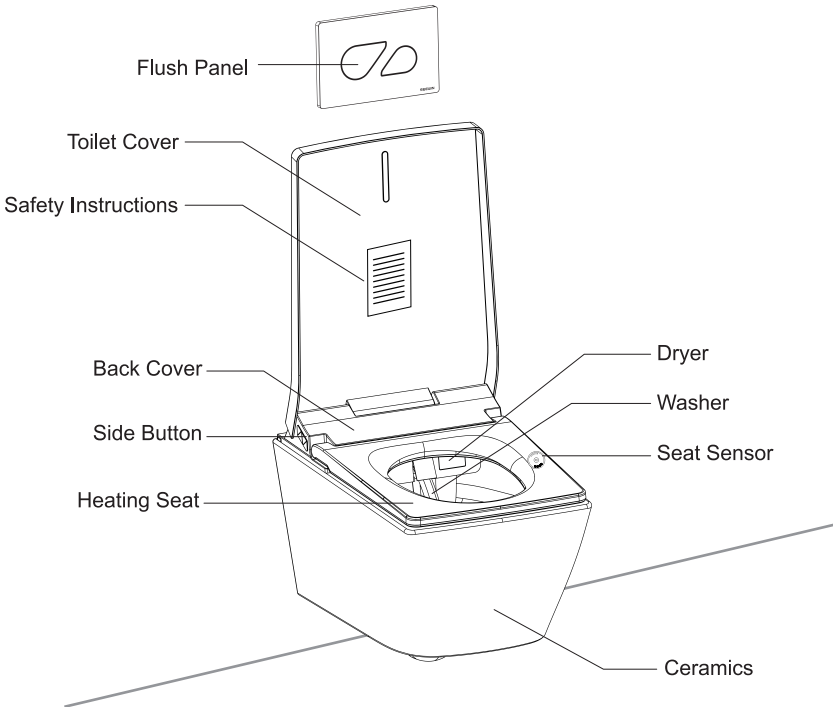

Note: Regarding the appearance & function, please refer to the physical goods.



1.3 Remote

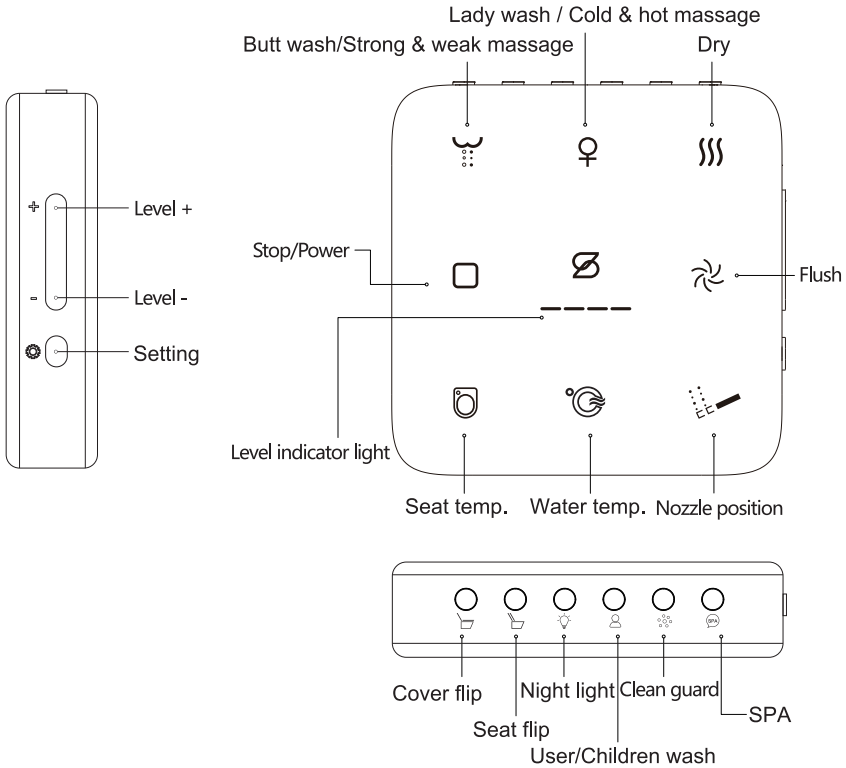

Pairing the remote



1. Unplug the toilet, press and hold the Dry button until the level indicator light starts flashing, and then release the Dry button.
press and hold the dry button

Level indicator light flashes
2. Hold the remote close to the toilet, and then plug in the toilet.

230V~
3. When the level indicator light stops flashing and stays on, pairing succeeds.

Tips: Do not keep it close to your body for whom has cardiac pacemaker and other auxiliary medical equipment in the body. Because the remote has strong magnet inside.

2. Packing list

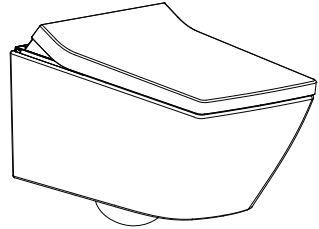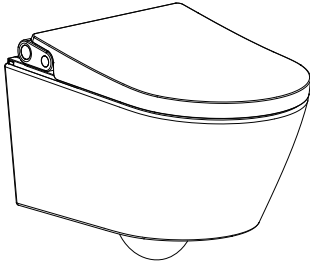

Complete machine



Remote



Water hose



Connector











Battery of remote

Manual



3. Explanation of symbols

- | | | | |
|-----|---|---------|---|
| 3.1 |  | DANGER | Express that you will be dead or seriously injured if not avoid the dangerous situation. |
| 3.2 |  | WARNING | Express that you will be dead or seriously injured if not avoid the dangerous situation. |
| 3.3 |  | CAUTION | Express that it may cause personal injury or property damage if you ignore the sign and misoperate. |
| 3.4 |  | | Do not add foreign matter such as water or detergent to the product body. |
| 3.5 |  | | Do not disassemble the product privately. |
| 3.6 |  | | Keep away from fire. |
| 3.7 |  | | Please operate according to the manual. |
| 3.8 |  | | It's forbidden. |

4. Safety instructions

Please read the manual carefully, especially the safety instructions in order to make sure you can enjoy the service of the product. Please reserve the manual carefully. Please attach the manual if you send the product to others.

4.1 Normal use

This product is a one-piece intelligent toilet with integrated flushing system. It can comfortably clean the buttocks and private place which is used only for closed space .

Any other use is considered as abnormal use. For abnormal use, we will not assume any responsibility .

4.2 Safety instructions

Please read and follow the safety instructions as below!

Requirement of user

- For disabled, defective people in physical, sensory perception and intellectual abilities, and people who is lack of experience and common sense (including children), please use this product under supervision.
- Don't allow children to play with this product.



DANGER

Please make sure that the ground wire has been connected.

- If the the ground wire is not connected, it may cause electric shock or leakage.
- Make sure the power cord is not damaged.
- The power cord can't be stucked or squeezed.
- Keeps the power cord away from hot surfaces and sharp edges.
- The power socket must be within the specified range(AC120V±10%).



DANGER

- Do not use it in thunder weather. (Please Pull out the power plug in thunder weather.)
- Do not pull the power cord at random, break, forcibly bend and twist, stretch, curl, bundle, load or over-clamp.
- Do not touch or plug and unplug the power plug with wet hands, otherwise there will have danger of electric shock.
- Do not use it when it can't work normally. Disconnect power immediately , close the angle valve to cut off the water source and ask for help from professional repair man.



WARNING

Avoid product failure and damage caused by improper use.

The cold water of the intelligent electronic toilet should be connected from the main water supply pipe. Do not connect any wastewater, mixed water, industrial water, sea water or other untreated or semi-treated water.

- If the product is moved from a lower temperature position to a higher temperature place, it may have condensate water. Please turn off the product for several hours at this time.
- Do not install this product in a room where may be frosted. The room temperature can't be less than 4 °C.
- Do not put fire, candles, cigarette butts or similar items on this product.
- Do not soak the product in water or expose it to the sun.
- Do not attempt to flush debris other than human waste and toilet paper.
- Do not lean on the back cover, climb or stand on the product.
- Do not put any heavy objects on the cover.
- Repair work must be performed by relevant professionals.
- Do not disassemble the back cover, cover and seat.
- Do not modify, retrofit or repair the product.
- Incorrect repair may cause accidents, damage or operational failure.
- If the power cord is damaged, don't disassemble it by yourself. It must be replaced by the manufacturer or the repair department or a similar professionals.
- When do the cleaning and maintenance of the plastic part, please do not use unsuitable detergent(such as Sulfuric acid, nitric acid, acetic acid, carbon cyanide, chloroform, acetone, methyl ethyl ketone, benzene, hydrochloric acid, nitric acid, steam kerosene etc.)
- Please cut off the power when cleaning the product and the remote. Don't pour water or detergent into the product.
- Avoid to use this product in an environment which is humid and easily touched by water .Don't spray water to the product. Don't rinse this product with water.
- Don't block the air outlet. Don't put your hands or other things into the air outlet. Don't cover the air outlet when using it.
- Don't shoot urine into the air outlet.
- Do not put ignited cigarettes and other burning materials into this product.



4.3 The use of battery

If there's leakage of battery liquid, please do not let the skin, eyes and mucosa to be touched by the battery liquid. If you touch the liquid carelessly, please rinse the infected part immediately with mass water and go for a doctor immediately.



WARNING

- Please put the battery out of the reach of kids. It will be life-threatening if swallowing the battery. Please request medical immediately if the battery has been swallowed.
- Do not charge the battery. It is forbidden to reactivate and disassemble the battery or put it into fire.
- Please get out the battery from the remote after running out of power .Otherwise the liquid may leak and cause damage.
- Clean the battery and contacts before assemble the battery. Pay attention to the battery polarity to be assembled in correct position during installation.
- Please take out the battery and save it correctly if the remote is not used.
- Do not keep the battery in extreme environment. Do not touch the heat source or expose to the sun, otherwise it may cause leakage.
- Do not carry and store the battery with metal products.




CAUTION

- Do not use excessive force when closing the cover and seat .
- Do not intentionally soil, spray or block the cleaning nozzle.
- Please pull out the plug regularly and wipe the dust from the power plug with a dry cotton cloth.
- Keep the skin close to the seat sensor when use it, otherwise the product will stop cleaning or drying function. Children should seat back to touch the seat sensor.
- Please use the new hose parts attached with the product, the old one can't be reused.
- Please avoid closing to the heater.
- Do not connect to the power through the external switch to avoid danger from accidental resetting of the circuit breaker, such as a timer or a timed on/off circuit that is connected by a common component.
- Please close the angle valve before disassembling the filter. Be sure to tighten the angle valve to prevent water leakage when installing the filter after cleaning.
- When you will not use this product for a long time, such as going out for a business trip or travelling, be sure to pull out the power plug, turn off the water and drain the remaining water inside the product.
- The remaining water may freeze when the product is transported over long distances or stored for a long time in cold winter or alpine region. To prevent the damage caused by freezing, please take antifreeze measures.

5. Side buttons

5.1 Liberty side button instruction

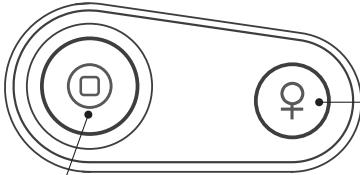

Left Button

Stop/Power

Power switch: Long press for Power On/off

1. When it is power off, long press for more than 2 seconds, it will be power on.
2. When it is power on, long press for more than 2 seconds, it will be power off.

Short press the button as a stop command when the toilet is not in static whether the human body is seated or not, the light becomes red.

It is used for stopping the butt wash, lady wash, personalized wash, nozzle cleaning and dryin.

Lady wash / Reciprocating


Lady wash / Reciprocating (when seated)

Short press the button to the function of lady wash, the light becomes white. Then lady wash function starts with the memory of water temperature, tube position and water pressure levels. After cleaning for 90 seconds, it turns to drying function for 5 minutes.

※ The factory settings for tube position, water pressure and water temperature of butt wash function are in the middle level.

Press once more to the function of reciprocating cleaning.

Press once more to close the function of reciprocating cleaning.
Press once more to the function of reciprocating cleaning, the nozzle will move back and forth.

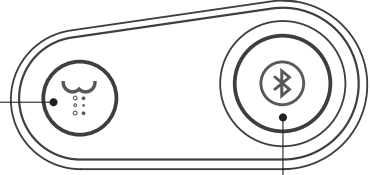

Right Button

Bluetooth connection

- Ⓜ Blue light means allowing to remote the toilet by Bluetooth. To short press the light, it will turn red meaning to undo any operation by Bluetooth.

Butt wash / Reciprocating

Butt wash / Reciprocating (when seated)

Short press the button to the function of butt wash, the light becomes white. Then butt wash function starts with the memory of water temperature, tube position and water pressure levels. After cleaning for 90 seconds, it turns to drying function for 5 minutes.

※ The factory settings for tube position, water pressure and water temperature of butt wash function are in the mid level.


Press once more to the function of reciprocating cleaning.

Press once more to close the function of reciprocating cleaning.
Press once more to the function of reciprocating cleaning, the nozzle pipe will move back and forth.

5.2 Freedom side button instruction

Bluetooth connection

⌘ Blue light means allowing to remote the toilet by Bluetooth. To short press the light, it will turn red meaning to undo any operation by Bluetooth.

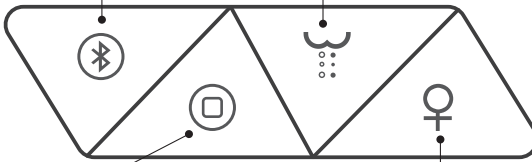

Stop/Power

Power switch: Long press for Power On/off

1. When it is power off, long press for more than 2 seconds, it will be power on.
2. When it is power on, long press for more than 2 seconds, it will be power off.

Short press the button as a stop command when the toilet is not in static whether the human body is seated or not, the light becomes red.

It is used for stopping the butt wash, lady wash, personalized wash, nozzle cleaning and drying.

Butt wash / Reciprocating

Butt wash / Reciprocating (when seated)

Short press the button to the function of butt wash, the light becomes white. Then butt wash function starts with the memory of water temperature, tube position and water pressure levels. After cleaning for 90 seconds, it turns to drying function for 5 minutes.

※ The factory settings for tube position, water pressure and water temperature of butt wash function are in the mid level.

Press once more to the function of reciprocating cleaning.

Press once more to close the function of reciprocating cleaning.

Press once more to the function of reciprocating cleaning, the nozzle pipe will move back and forth.

Lady wash / Reciprocating

Lady wash / Reciprocating (when seated)

Short press the button to the function of lady wash, the light becomes white. Then lady wash function starts with the memory of water temperature, tube position and water pressure levels. After cleaning for 90 seconds, it turns to drying function for 5 minutes.

※ The factory settings for tube position, water pressure and water temperature of butt wash function are in the middle level.

Press once more to the function of reciprocating cleaning.


Press once more to close the function of reciprocating cleaning.

Press once more to the function of reciprocating cleaning, the nozzle will move back and forth.



5.3 Flush panel instruction for use

■ Touchless intelligent flush panel

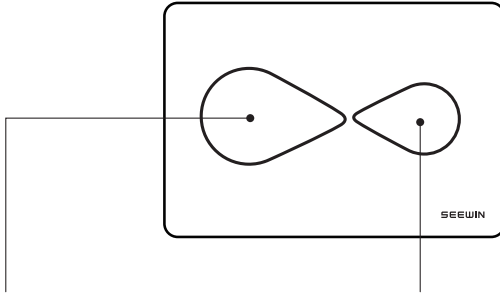


Full flush (wave hand to left)

Close to the panel, and then wave your hand to the left, the LED of the full flush icon will light up, starting to flush in full volume.

Half flush (wave hand to right)

Close to the panel, and then wave your hand to the right, the LED of the half flush icon will light up, starting to flush in half volume.

■ Manual flush panel

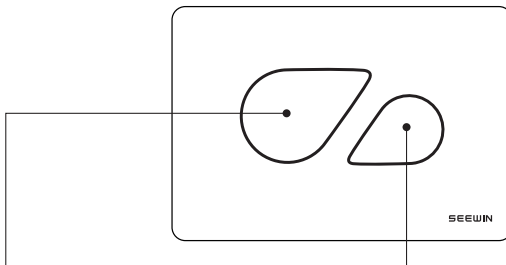

Full flush














Close to the panel, and then press the full flush button to flush in full volume.







Half flush

Close to the panel, and then press the half flush button to flush in half volume.



6. Introduction to the remote control and its functions

FUNCTION	ICON	OPERATING INSTRUCTIONS
Stop/Power		<ul style="list-style-type: none"> When it is power off, long press for more than 2 seconds, it will be power on. When it is power on, long press for more than 2 seconds, it will be power off. Short press [Stop] to terminate the following functions: The functions as below will stop working : butt wash, lady wash, strong & weak massage, cool & warm massage, children wash, self-cleaning of nozzle, drying, live water replacement.
Butt wash		When the human body is seated, press the [Butt wash] button to start the butt wash. The pipe reciprocating function opens by default, which will increase the cleaning area. Press the [butt wash] button again to close the pipe reciprocating function.
Strong & weak massage		In cleaning mode: Long press the [Butt wash] button for 2S to turn on/off the strong and weak massage, and the water pressure will change.
Lady wash		When the human body is seated , press the [Lady wash] button to start the lady wash. The pipe reciprocating function opens by default, which will increase the cleaning area. Press the [lady wash] button again to close the pipe reciprocating function.
Cool& warm massage		In cleaning mode: Long press the [Lady wash] button for 2S to turn on/off cold and hot massage, and the water temperature starts to change.
Dry	  	When the human body is seated, press the [Drying] button to start the drying function. -press [level +] button, the temperature will increase -press [level -] button, the temperature will reduce. Short press the [Stop] button to stop the drying. It will stop automatically after continue drying for about 5 minutes.
Flush		Press the [flush] button to start the flush function
Tube position	  	When you're washing Press [Nozzle position] button into the mode of nozzle adjustment. - Press [level +] button to move the tube position forward. - Press [level -] button to move the tube position backward.
Water temp.	  	Press [Water temp.] button into the mode of water temp. adjustment. - Press the [level +] button to increase the temperature. - Press the [level -] button to decrease the temperature.

FUNCTION	ICON	OPERATING INSTRUCTIONS
Seat temp.		<p>Press [Seat temp.] button into the mode of seat temp. adjustment.</p> <ul style="list-style-type: none"> - Press the [level +] button to increase the temperature. - Press the [level -] button to decrease the temperature.
Cover flip		<p>Press the [Cover flip] button to open or close the cover (If the seat is open, it will close the seat and the cover together).</p> <p>It will open the cover automatically when you are close to it if the automatic cover flip function is set in the single open mode.</p> <p>! The automatic cover flip function is valid only when the cover is closed.</p>
Settings of automatic cover flip		<p>Factory settings Open</p> <p>Press and hold the [Setting] button, then press the [Cover flip] button to turn On/Off the automatic cover flip function.</p> <ul style="list-style-type: none"> - It will not open the cover when you are close to the toilet in the states of function Off. (The toilet will response short beep.) - It will open the cover automatically when you are close to the toilet in the states of function On. (The toilet will response long beep.)
Night light		<p>Press the [Night light] button in the remote to turn on/off this function.</p> <p>When turning on the function, the gear position button on the remote lights up, in the meanwhile the toilet's soft light lights up.</p> <p>Press the button once more to turn off the function.</p>
Children wash		<p>Long press the [User] button for more than 2 seconds when the human body is seated. The cleaning tube is extended to the setting position and clean according to the setting water temperature. It stops automatically after 90 seconds. This function presets the water pressure for children washing specially.</p> <p>Note: Water temperature, water pressure, tube position selection, reciprocating, massage function can't be adjusted when this function starts.</p>
SPA		<p>Long press the [SPA] button for more than 2 seconds to start SPA function when the human body is seated.</p> <ul style="list-style-type: none"> ● When the SPA function is open, it will start the memory cleaning function and gear position and also start the strong & weak massage and hot & cold massage function. ● Long press the [clean guard] button once more for more than 2 seconds to close the stop & weak massage and hot & cold massage function. <p>Short press the [Stop] button to stop the SPA function.</p> <ul style="list-style-type: none"> ● After continue cleaning for about 5 minutes, it will stop cleaning function and change to the drying function automatically.



7. Automatic flush

press and hold the [Setting] button , then press the [Flush] button also to turn on/off the automatic flush function. When the function is open, it will response short beep. When you close it, it will response long beep. It can flush automatically only in the mode of automatic flush. The specific operation is as follows:

1. Automatic flushing before drying.

※When you use the drying function after using the cleaning function, it will automatically flush once before drying.

2. After body leaving for about 5 seconds, it will automatically flush.

※Automatic flushing will not be performed when the human body is seating. It will perform automatic flushing once after leaving the seat for about 5 seconds. (The seating time should be more than 6 seconds.)

※It will not automatically flush if the last function is drying when leaving the seat.

8. Automatic cover flip & foot sensor seat flip function introduction

(only for the product which has automatic cover flip & seat flip function)

Foot sensor seat flip essentials:

The foot needs to be placed within 2cm of the sensor and leaves immediately, then the foot sensor is effective.

The toilet will not respond when the foot is close to it without leaving.

The toilet will not respond when the foot leaves after more than 5 seconds in front of the sensor.

Automatic cover flip

The cover flips automatically when people are close.




Automatically close the seat and cover after about 20 seconds.



The seat flips by foot sensor.




Automatically flush after about 3 seconds.

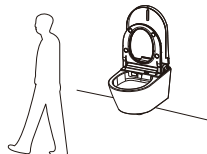

Leave after more than 10 seconds.



Automatic cover flip and seat flip

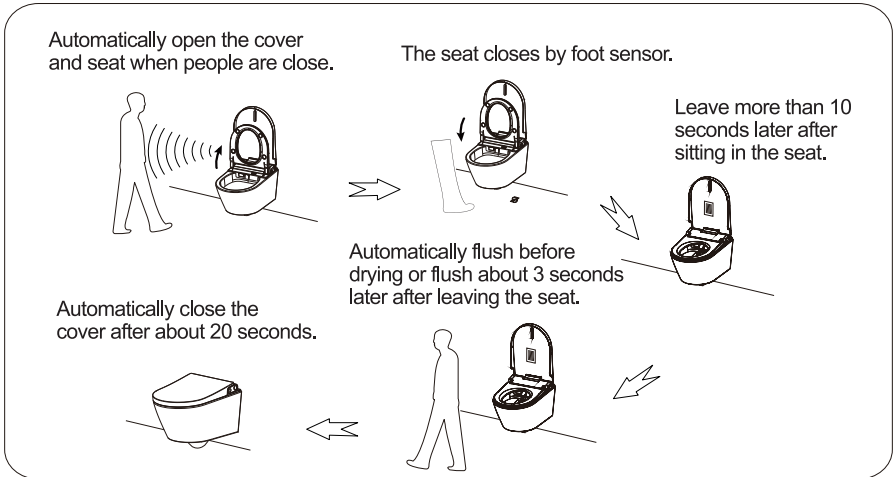

9. More humanized design

- APP

Search for "SEEWIN" in your Android or Apple app store. For Android, you can also use your cell phone browser and scan the QR code beside to download.

APP pairing: SEEWIN APP connects to toilet via Bluetooth.

SEEWIN APP and Bluetooth must be both turned on to establish a connection.



- Water purification

The filter device purifies the water source to ensure the clean and hygiene when using.

- Eightfold protection

The product has eightfold protection measures such as leakage protection to ensure the safe use of users.

- Energy-saving function

The product will close after stand by for 36 hours to avoid wasting and concern.

10. Acceptance instructions after installing

After installation finished, you must test run and record the installation results in the table below.

Acceptance instructions item		Conclusion	
Make sure whether it is connected to the AC230V~, 10A, 50Hz grounded power supply socket.			
Is the power plug connected stably in the socket ?			
Are the water pipe joints tightened ?			
Is the total inlet valve of the water pipe open ?			
Is the power indicator light lighted up ?			
Can the cleaning nozzle extend and retract ? Leakage or not ?			
All the function are normal or not : Seating function, butt wash, lady wash (including water pressure adjust, cleaning position adjust), drying (including wind temperature adjust), water temperature adjust, seat temperature adjust, nozzle cleaning, deodorization, remote control and side buttons are used normally or not ? The inspection must be completed and confirmed.			
Installation date		Store name	Installer

11. Product specification

Rated voltage	230V~,50Hz
Rated power	1150W
Power cable	1.5m
Applicable water pressure	0.07-0.75MPa
Water temperature	4-35 C
Ambient temperature	4-40 C
Net weight	45kg
Waterproof level	IPX4
Cleaning water flow	0.5-0.7L/min
Seat temperature adjust	(Normal temperature-around 40 C) total 4 levels
water temperaturer adjust	(Normal temperature-around 40 C) total 4 levels
Wind temperature adjust	(Normal temperature-around 40-65 C) total 4 levels
Cleaning time	Normal cleaning is about 90s,SPA cleaning is about 5 mins
Nozzle position adjust	4 levels
Heating mode	Fraquency conversion heat
Safety device	Leakage Protection switch, wind / seat / water temperature Protection
Deodorization	Nano intelligent deodorization

Note: Rated power: when the ambient temperature is 23 ° C, inlet water static pressure is 0.2 MPa ± 0.02 MPa, inlet water temperature is 15 ° C, and seat temperature (high), water temperature (high), water pressure (high), the maxium stable power we can read in the mode of lady wash.




12. Cleaning and maintenance

Please clean and maintain the product regularly to make sure the normal use of product.

Note

- Please cut off the power, close the angle valve and stop the before maintenance.
- Do not rinse this product with water during maintenance.

■ Plastic parts and ceramics's cleaning and maintenance

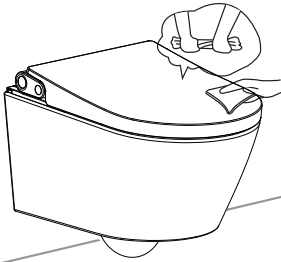


- When the product become dusty or dirty, wipe the product with a soft damp cloth.
- The ceramics can be cleaned with neutral detergent combined with cold or warm water, using a soft brush, rag or sponge.

※ Do not use unsuitable detergent (such as concentrated sulfuric acid, concentrated nitric acid, glacial acetic acid, carbon tetroxide, chlorofom, acetone methyl ethyl ketone, benzenem toluene, phenol, cresol, dimethylformamide, methyl ether, large soybean oil, acetate, 40% nitric acid, concentrated hydrochloric acid, 95% alcohol, gasoline, kerosene, brake oil, etc.)


■ Nozzle's cleaning and maintenance

In the condition of nobody on the seat, press [butt wash] button or rotate the [butt wash] button on the toilet for 2 seconds, the washer will extend automatically. If the nozzle is dirty, hold the washer and clean it with a toothbrush. Do not use excessive force, the nozzle will be damaged.

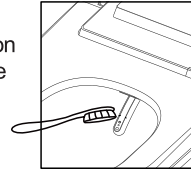

! Warning

Please don't fill the water & detergent into the intelligent toilet or remote. Please don't make the intelligent toilet or poug wet by water or detergent.

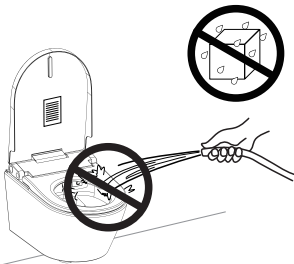

※ Or else may make electric shock or fire hazard.

Antifreeze in winter

(when the ambient temperature is below 1°C)

1. When you go out for a business trip or traveling and not use the toilet for a long time.

- First close the water supply angle valve, then press the flush button in the remote to conduct a drainage.
- After 30 seconds of drainage, please be sure to pull out the power plug.

2. The remaining water may freeze when the product is transported over long distances or stored for a long time in cold winter. To prevent freezing, please take antifreeze measures.

Note

- Connect to power and water after putting the product for 30 minutes until it is naturally thawed in warm room.
- If it is frozen and failed to spray water, you can cover the water supply pipe or connection part with cloth which has been soaked in hot water to make it thawed. (Please do not pour the water supply pipe with hot water or blow it with hot wind.)

13. Troubleshooting guide

If something goes wrong, please read the following to try to solve the problem. If can't solve, please contact to seller.

Power switch

Fault	Failure analysis	Solutions
Product not work	Check whether the socket is electrified or not, the plug is loosened or not	Check circuit
	Check whether the toilet is power on or not (The side button light is on or not)	Press the power on/off button till the side button light is on
	Check whether the leakage protection button in the plug is on or off (The light of leakage protection plug is on or off)	Pull out the plug and connect it later. Press the reset switch of the leakage protection plug. If still not work, pull out the plug and ask a professional repair man for help

Butt wash , Lady wash

Fault	Failure analysis	Solutions
No water from the nozzle	Check whether there's water supply or not	Wait for water supply back to normal
	Check whether the angle valve is closed or not	Open the angle valve
	Check whether the water inlet pipe is bended or not	Ensure that the inlet pipe is not bended
Cleaning strength not enough	Check whether the water pressure is in low gear or not	Turn up water by remote
Nozzle water abnormal	Abnormal operation	Unplug the power cord and plug it in 1 mins later
Water temperature not enough	Check whether the water temperature is in low gear or not	Reference manual how to adjust water temperature
Washer aways dripping water	Solenoid valve failure	Please find a professional repair man
Washer can not use	Seat body induction failure	Please find a professional repair man

Drying/Wind temperature

Fault	Failure analysis	Solutions
Drying with cold wind	Check whether the wind temperature setting is closed or in low gear	Adjust the wind temperature according to manual

Seat temperature

Fault	Failure analysis	Solutions
No seat heating/lower temperature	Check whether the seat temperature setting is closed or in low gear	Adjust the seat temperature according to manual

Remote

Fault	Failure analysis	Solutions
Remote failure	Low power of battery	Replace the old battery
	Check whether there's any water inside remote or not	Dry the water with dry cotton cloth

Ceramics

Fault	Failure analysis	Solutions
Flush uncleaned when in lower water pressure	Angle valve blocked	Clean the angle valve according to the manual
	Water pressure is too low	Measuring the water volume which is less than 10L for 30s or not (Our suggestion is to buy a booster pump)
	Water inlet pipe bended	Ensure the water supply line is smooth
Normal water pressure but flush uncleaned and no siphon	outlet has air leakage	Please ask professional repair man for help
	S pipe blocked	Using a toilet dredge
Normal water pressure, but flushing not work	Check the angle valve is closed or not	Open the angle valve again
	Flush valve failure	Please ask professional repair man for help

Others

Fault	Failure analysis	Solutions
APP not work	The APP is not connected with the toilet	Open the bluetooth of mobilephone, connect the APP with the toilet.
Cover/seat falls down too fast	Failure of Damping Slowing down Function	Clean the filter according to the manual
Not automatically flush after men urinate	Check if you only open the cover without opening the seat	Open both the cover and seat
Orderly cyclic work of each function	Mistaken into engineering debugging mode	Pull out the plug and connect the plug after 1 minute
Night light not work	Check the night light whether is close or not	Open the night light according to the manual
Leakage		Close the angle valve and disconnect the power supply then contact your installer

14. Correct Disposal of this product

This mark indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.





Seewin Technology (Zhejiang) Co.,Ltd.

Area A, Building 2, No. 1469, Jingsi Road,
Taizhouwan New Zone, Taizhou,
Zhejiang, 318000, China

www.china-seewin.com